


GP40水泵机组配置表

GP40

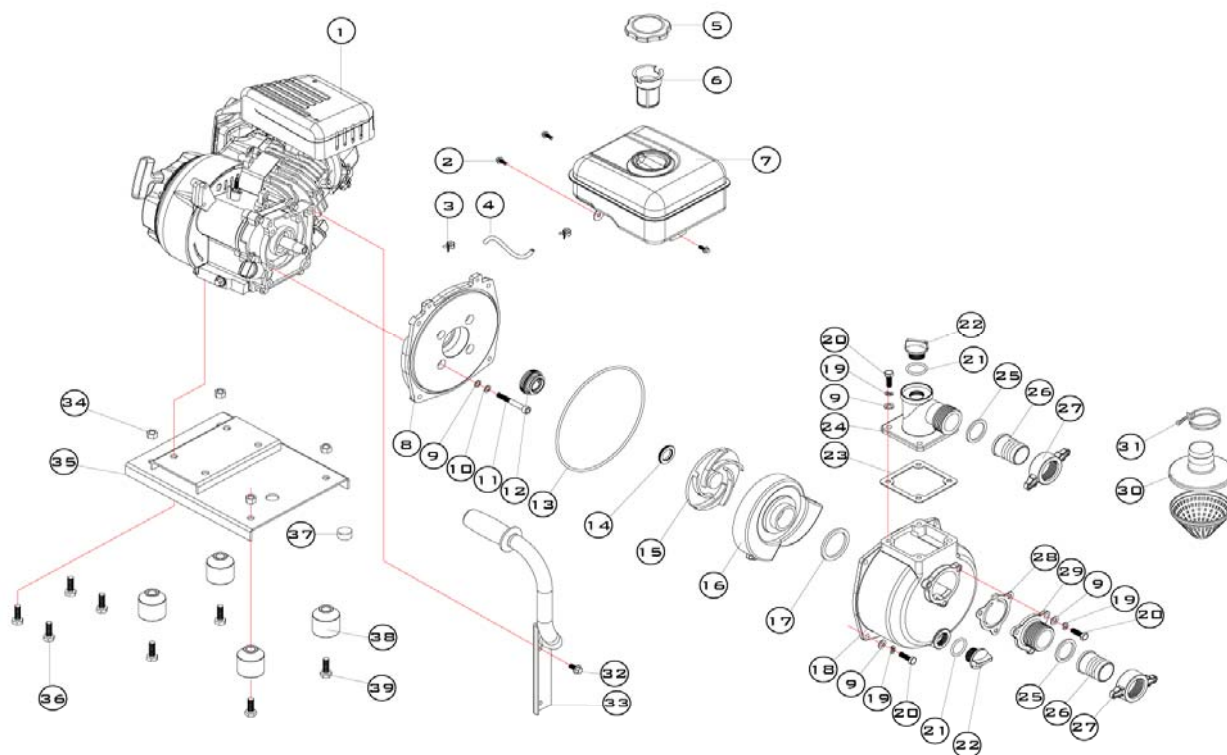


NO.	CODE	DESCRIPTION	QTY.
1	2EP0901	UP154gasoline engine	1
2	3S22060161	flange bolt M6*16	3
3	3A2006001	Pipe clamp	2
4	3B0111007	Fuel pipe	1
5	3A2006100	Fuel tank cup	1
6	3A2006007	Filter cup	1
7	3A1006009	Fuel tank	1
8	3G3040001	Pump cover	1
9	3S35081	washerφ8	15
10	3G4050004	rubber washer	4
11	3S24080603	Inner hex bolt M8x60	4
12	3G3040002	Mechanical seal	1
13	3G3040003	O ring	1
14	3G3040006	porcelain seal	1
15	3G3040007	water pump impeller	1
16	3G3040008	volute casing	1
17	3G3040009	rubber bushing	1
18	3G3040010	housing of pump	1
19	3S31082	spring washer φ8	11
20	3S21080251	hexgon flange bolt M8X25	11
21	3G3040013A	O ring	2
22	3G3040013	plug packing	2
23	3G3040014	rubber washer	1
24	3G3040015	outlet flange	1
25	3G3040020	O ring	2
26	3G3040021	pipe joint	2
27	3G3040022	joint grip	2
28	3G3040011	check valve	1
29	3G3040012	inlet flange	1
30	3G3040023	Rear housing	3
31	3G3040024	filter net	1
32	3S22080121	flange bolt M8X12	2
33	3G20030	handgrip	1
34	3S12081	flange nut M8	4
35	3G20031	base assm.	1
36	3S22080251	flange bolt M8*25	4
37	3C13008	shock absorber	1
38	3C9501006	shock absorber	4

GP40水泵机组配置表

39	3S22080201	flange bolt M8X20	4
----	------------	-------------------	---

UP154(UP90)零部件配置表


1. 曲轴箱总成 CRANKCASE ASSY

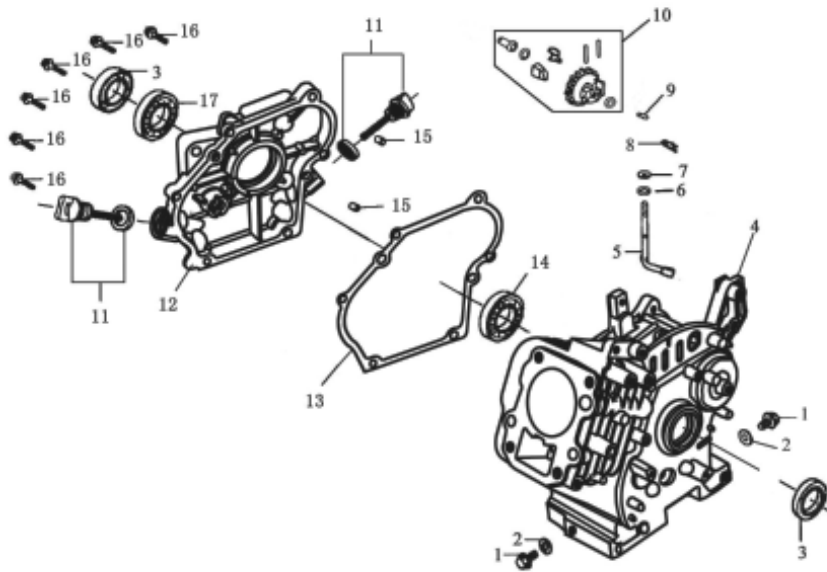

序号	编号	名称	英文名称	数量	备注
	CODE	DESCRIPTION	DESCRIPTION	QTY.	REMARK
1	3A1001001	放油螺塞M10×15	Drain plug	2	
2	3A1001002	放油螺塞垫圈	Washer,drain plug	2	
3	3S61173006	曲轴油封	Oil seal, crankshaft	2	
4	3A1001004	曲轴箱部件	Crankcase	1	
5	3A1001005	调速摆杆	Regulating sway bar	1	
6	3A1001018	开口挡圈6-GB/T896	Ringent pin circlip	1	
7	3A1001006	调速摆杆垫片Φ8	Washer	1	
8	3A2001007	调速摆杆锁夹	Split pin	1	
9	3A1001008	调速轴	Regulating shaft	1	
10	3A1001100	调速从动齿轮总成	Driven gear assy	1	
11	3A1001200	机油尺总成	Dipstick with seal	2	
12	3A1001012	曲轴箱盖部件	Crankcase cover	1	
13	3A1001013	曲轴箱垫片	Gasket, crankcase	1	
14	3S7106203	轴承6203	Bearing 6203	1	
15	3S5108016	定位销Φ8×16	Set pinΦ8×16	2	
16	3S22060251	螺栓M6×25	Bolt M6×25	6	
17	3S7106303	轴承6303	Bearing 6303	1	

UP154(UP90)零部件配置表


2. 气缸盖、气缸盖罩总成 CYLINDER HEAD & CYLINDER HEAD COVER ASSY

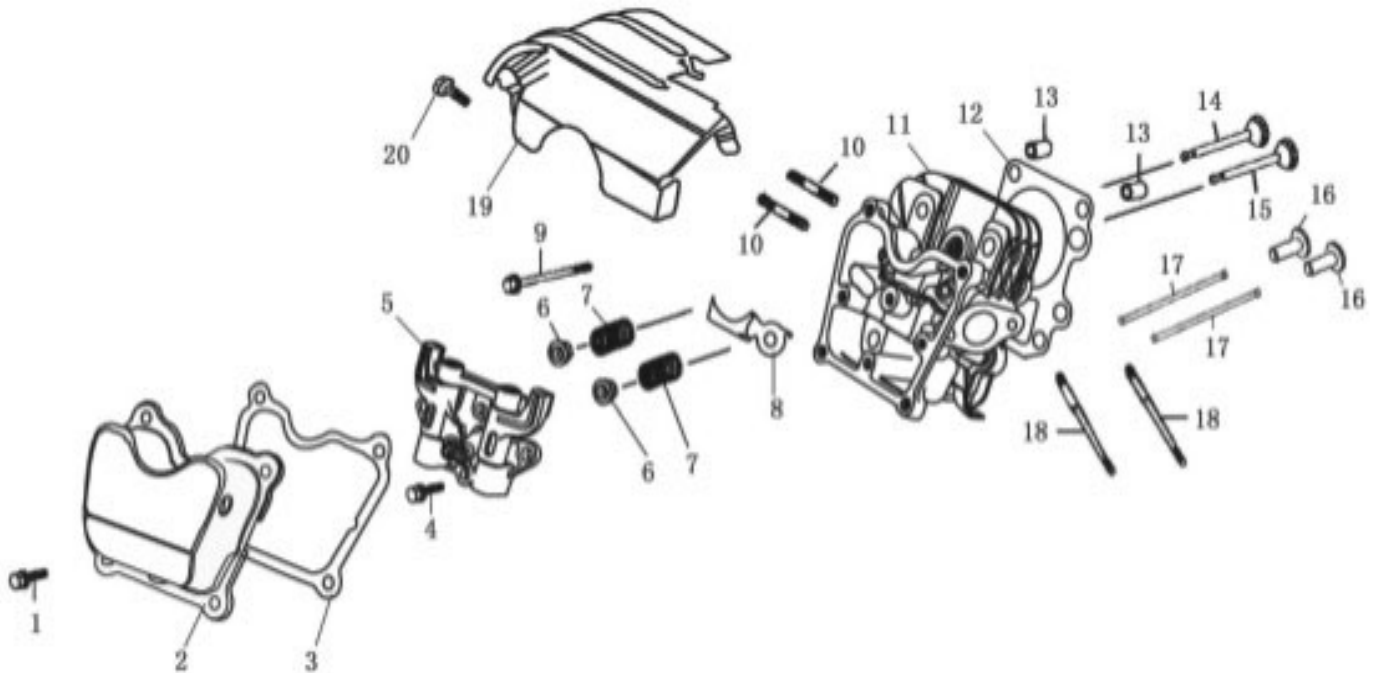

序号	编号	名称	英文名称	数量	备注
	CODE	DESCRIPTION	DESCRIPTION	QTY.	REMARK
1	3S22060141	螺栓M6x14	Bolt M6x14	4	
2	3A1002100	气缸盖罩总成	Cylinder head cover	1	
3	3A1002006	气缸盖罩密封圈	Gasket,cyl. head cover	1	
4	3S22060181	螺栓M6x18	Bolt M6x18	4	
5	3A1002200	气门摇臂总成	Valve rocket assy	1	
6	3A1002010	气门弹簧座	Spring seat	2	
7	3A1002012	气门弹簧	Valve spring	2	
8	3A1002007	油路挡板	Turn back oil ban	1	
9	3S22080501	螺栓M8x50	Bolt M8x50	4	
10	3S25080341	双头螺柱AM8x34	Stud AM8x34	2	
11	3A1002017	气缸盖部件	Cylinder head assy	1	
12	3A1002018	气缸盖密封垫	Cylinder head gasket	1	
13	3S5108016	定位销Φ8x16	Set pinΦ8x16	2	
14	3A1002019	排气门	Exhaust valve	1	
15	3A1002020	进气门	Intake valve	1	
16	3A1002022	挺柱	Tappet	2	
17	3A1002023	推杆	Pusher	2	
18	3S25060911	双头螺柱AM6x91	Stud AM6x91	2	
19	3A1002024	上导风罩	Lead wind cover	1	
20	3S22060101	螺栓M6x10	Bolt M6x10	1	

UP154(UP90)零部件配置表


3. 曲轴、活塞连杆、凸轮轴总成、飞轮组件 CRANKSHAFT, PISTON, CONNECTING, CAMSHAFT ASSY & FLYWHEEL ASSY

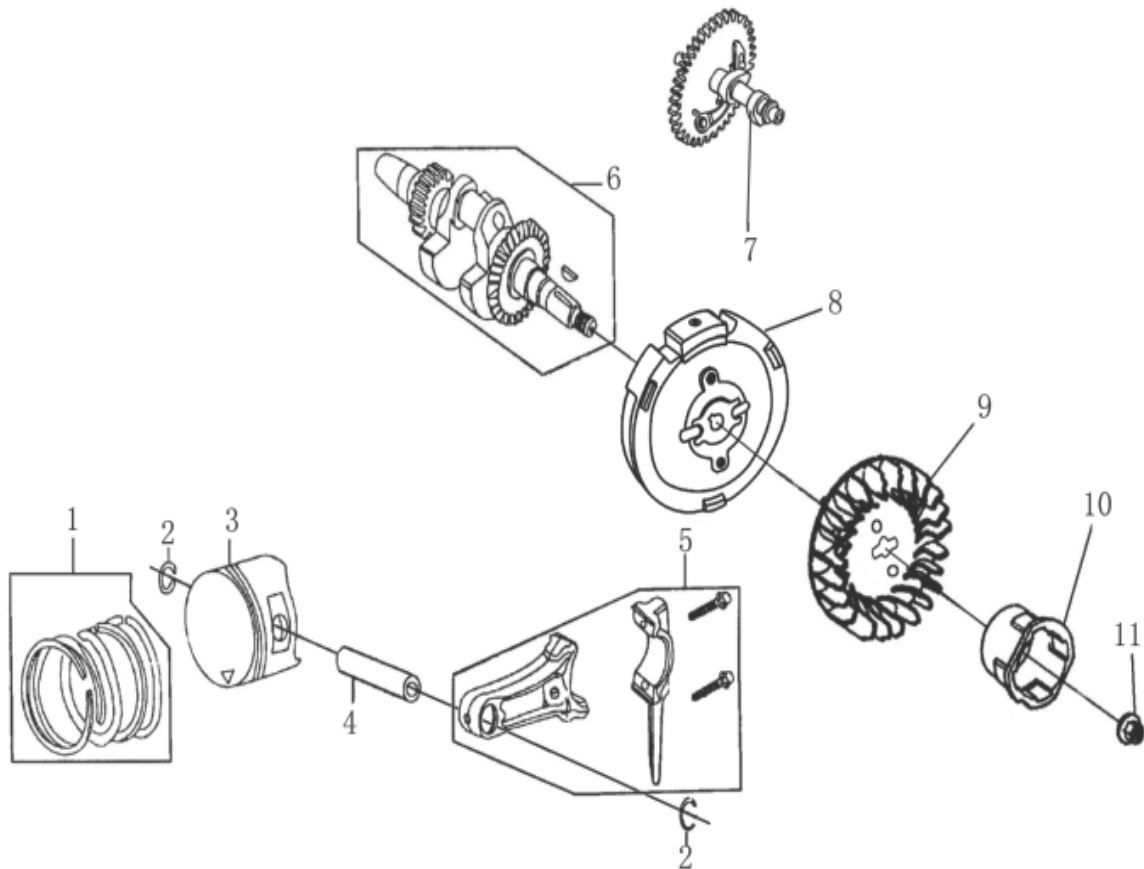

序号	编 号	名 称	英文名称	数 量	备 注
	CODE	DESCRIPTION	DESCRIPTION	QTY.	REMARK
1	3A1003100	活塞环组	Piston ring set	1	
2	3A1003002	活塞销卡簧	Piston pin circlip	2	
3	3A1003003	活塞	piston	1	
4	3A1003004	活塞销	Piston pin	1	
5	3A1003200	连杆总成	Connect rod assy	1	
6	3A1003300A	曲轴总成(P1)	Cranshaft assy	1	
7	3A1003400	凸轮轴总成	Camshaft assy	1	
8	3A1003008	飞轮组件	Flywheel	1	
9	3A1003009	飞轮风扇	Flywheel fan	1	
10	3A1003010	起动套	Starting flange	1	
11	3A1003011	飞轮螺母M12×1.5	Nut M12×1.5	1	

UP154(UP90)零部件配置表


4. 反冲起动器部件 点火线圈组件 RECOIL STARTER & IGNITION COIL ASSY

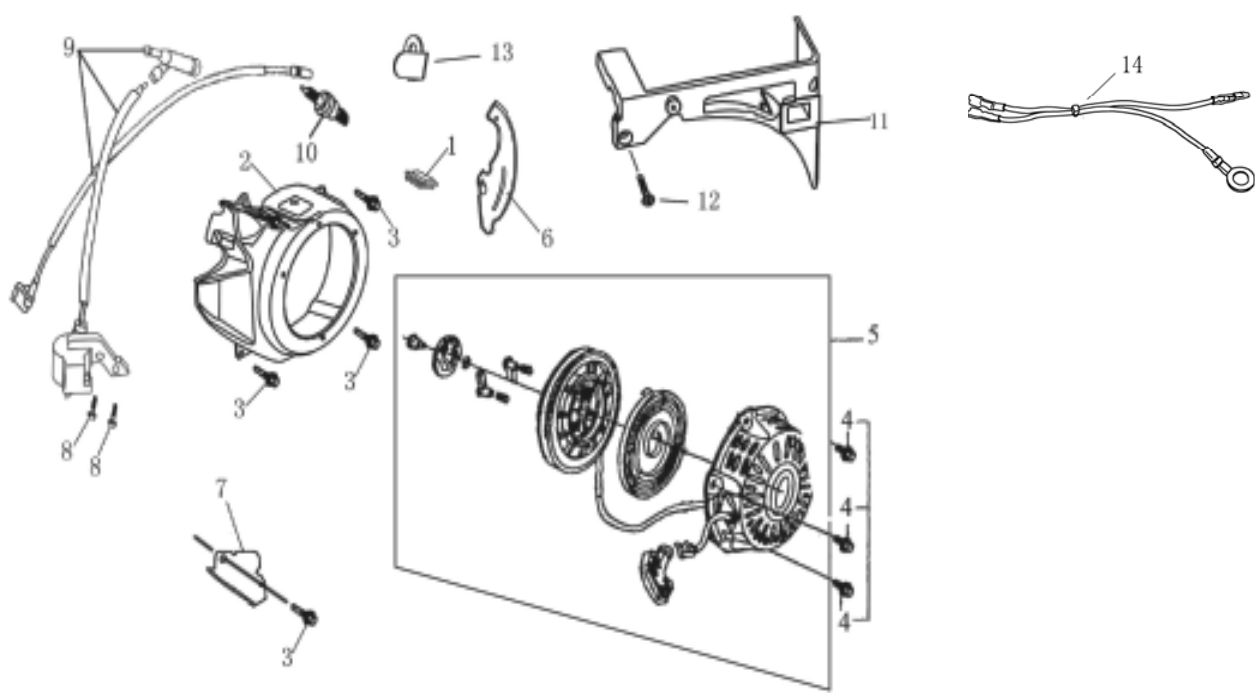

序号	编号 CODE	名称 DESCRIPTION	英文名称 DESCRIPTION	数量 QTY.	备注 REMARK
1	3M040306	船形开关		1	装在面板指示罩上
2	3A1004002N	导风罩(红)(单机)	Fan hood	1	
	3A1004002P	导风罩(201C暗红)(单机)			
	3A1004002Q	导风罩(黑)(单机)			
	3A1004002R	导风罩(黄)(单机)			
	3A1004002S	导风罩(橙)(单机)			
3	3S22060141	螺栓M6x14	Bolt M6x14	5	
4	3S22060121	螺栓M6x12	Bolt M6x12	3	
5	3A1004100A	手拉盘(红)	Recoil starter assy	1	
	3A1004100B	手拉盘(201C暗红)			
	3A1004100C	手拉盘(黑)			
	3A1004100D	手拉盘(黄)			
6	3A1004006	后挡风板	Retral baffle plate	1	
7	3A1004007	前挡风板	anterior baffle plate	1	
8	3S22060201	螺栓M6x20	Bolt M6x20	2	
9	3A1004300	一体化点火线圈	Ignition coil assy	1	
10	3A1004013	火花塞E7RTC	Spark plug	1	
11	3A1004017	面板指示罩	plaque	1	
12	3S27050122	十字螺钉 M5x12	Screw M5x12	1	
13	3A1004014	限位板	plaque	1	
14	3C5250001	汽油机熄火开关线		1	

UP154(UP90)零部件配置表


5. 空气滤清器总成 消声器组件 AIR CLEANER ASSY & MUFFLER ASSY

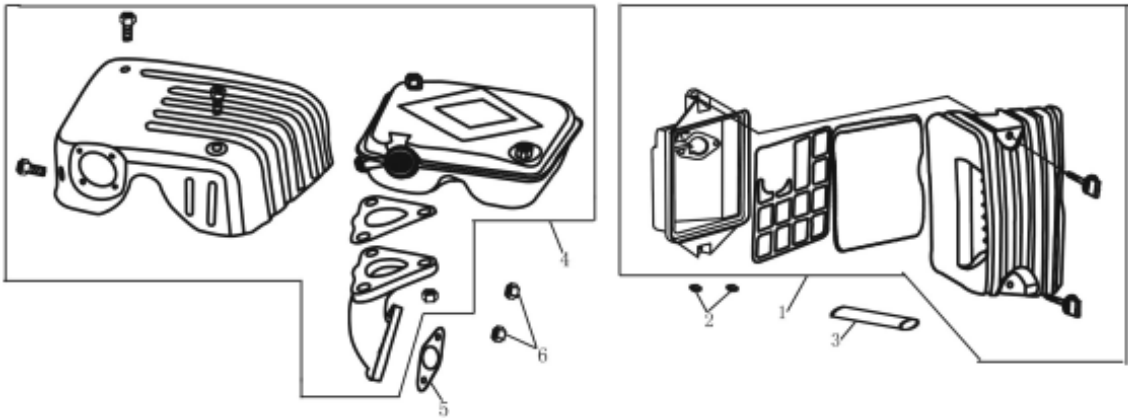

序号	编号	名称	英文名称	数量	备注
	CODE	DESCRIPTION	DESCRIPTION	QTY.	REMARK
1	3A1005100	空气滤清器总成	Air cleaner assy	1	
2	3S12061	螺母M6	Nut M6	2	
3	3A1005004	通气管	Air duck	1	
4	3A1005200	排气消声器总成	Exhaust muffler assy	1	
	3A1005200A	消声器(带催化剂)			
	3A1005200B	消声器(带阻火器)			
	3A1005200C	消声器(带催化剂阻火器)			
5	3A1005007	排气口垫片	Exhaust gasket	1	
6	3S12081	螺母M8	Nut M8	2	

UP154(UP90)零部件配置表

6. 燃油供油系统 FUEL SUPPLY SYSTEM

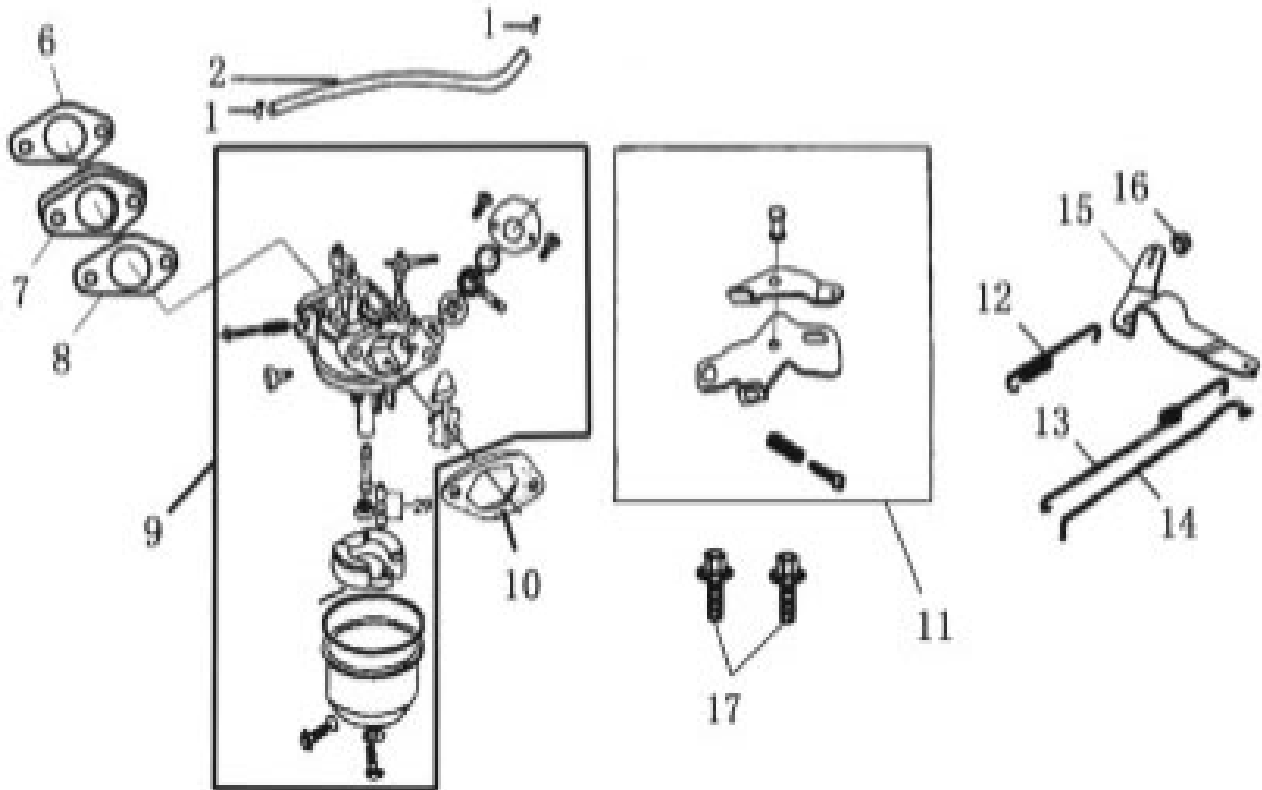

序号	编号	名称	英文名称	数量	备注
	CODE	DESCRIPTION	DESCRIPTION	QTY.	REMARK
1	3A2006001	管 夹	Pipe clamp	2	
2	3B0111007	燃油管	Fuel pipe	1	
6	3A1006012	进气口垫片	Inlet gasket	1	
7	3A1006011	化油器接块	Connecting block	1	
8	3A1006012	化油器垫片	Carburetor gasket	1	
9	3A1006200	化油器总成	Carburetor assy	1	
10	3A1006014	空滤器垫片	Gasket,air cleaner	1	
11	3A1006300	调速控制组件(单机)	Regulating control assy	1	
12	3A1006016B	调速弹簧(3600转)	Back spring	1	
13	3A1006017	节气门复位弹簧	Regulating spring	1	
14	3A1006018	调速拉杆	Pulling rod	1	
15	3A1006020	调速臂	Regulating arm	1	
16	3S12061	螺母M6	Nut M6	2	
17	3S22060081	螺栓M6x8	Bolt M6x8	2	